

# Intellitape

## USERS MANUAL



## **Table of Contents**

Intellitape Limited Warranty Agreement.....	2
Hardware.....	3
Button Configuration .....	3
Operation.....	3
As a stand alone device:.....	3
With the Genesis software: .....	3
For comparison measurement:.....	6

## **INTELLITAPE LIMITED WARRANTY AGREEMENT**

Chief Automotive Technologies, Inc. warrants for one year from date of purchase any components of its Intellitape which do not perform satisfactorily due to defect caused by faulty material or workmanship. THE WARRANTY DESCRIBED HEREIN SHALL BE IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY, OF FITNESS FOR A PARTICULAR PURPOSE, OF TITLE, OR OTHERWISE ON THE PART OF CHIEF AUTOMOTIVE TECHNOLOGIES, INC. AND MITCHELL INTERNATIONAL REGARDING THE EQUIPMENT, THE SPECIFICATIONS CONTAINED THEREIN OR ANY UNIT THEREOF. Chief's obligation under this warranty is limited to the repair or replacement of components which are defective and which have not been misused, carelessly handled, or defaced by the repair or repairs made or attempted by others. Chief Automotive Technologies, Inc. does not assume responsibility for any injury or property damage resulting from the operator's misuse of this product. Unless a statement made by any representative of Chief Automotive Technologies, Inc. is identified as a warranty, any such statements shall not be construed to constitute warranties and do not form part of the basis of the bargain; it being expressly understood that such statements are merely made in the course of the negotiations of the parties. FURTHERMORE, Chief Automotive Technologies, Inc. specifically excludes or disclaims any warranty, express or implied, based on any sample or model shown by Chief Automotive Technologies, Inc. to the buyer for demonstration purposes only.

LIMITATION OF REMEDIES. The parties agree that the buyer's sole and exclusive remedy against Chief Automotive Technologies, Inc. shall be for the repair or replacement of components which are defective and which have not been misused, carelessly handled, or defaced by the repair or repairs made or attempted by others. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available to him. This exclusive remedy shall not be deemed as to have failed of its essential purpose so long as Chief Automotive Technologies, Inc. is willing and able to repair or replace defective parts in the prescribed manner.

**Prior to the return of any merchandise for a warranty claim, contact the Customer Service Department (800-445-9262) for a Returned Goods Authorization Number and instructions. No goods may be returned without a Returned Goods Authorization Number.**

The buyer shall be required to deliver the defective part to Chief Automotive Technologies, Inc. UNLESS (1) the part was destroyed as a result of its defect or of any defect in any part covered in this warranty, AND (2) Chief is reasonably satisfied that the part was defective at the time of its failure.

### **DISCLAIMER OF WARRANTY**

**THE GRAPHICS AND DATA SUPPLIED WITH THE INTELLITAPE HAVE BEEN COMPILED FROM AUTHORITATIVE SOURCES. EVERY EFFORT HAS BEEN MADE BY CHIEF AUTOMOTIVE TECHNOLOGIES, INC., TO ASSURE ACCURACY; HOWEVER, MANUFACTURING CHANGES, ERRORS OR OMISSIONS MIGHT OCCUR. CHIEF AUTOMOTIVE TECHNOLOGIES, INC. DOES NOT ASSUME RESPONSIBILITY NOR CAN IT BE HELD RESPONSIBLE FOR THE LOSS OR DAMAGE RESULTING FROM VEHICLE MANUFACTURER'S CHANGES, ERRORS, OR OMISSIONS IN THIS SYSTEM.**

## Hardware

### *Button Configuration*



**SEND** - Transmit measurement data to Genesis

**ZERO** - Used for comparison measurements.

**HOLD** - Freeze measurement on display.

**ON/OFF** - Turns power on or off. This is also used to reset the Intellitape back to its nominal length.

**IN/MM** - Toggle display measurements between inches and millimeters.

**NOTE:** The Intellitape is programmed with a power saving feature that will turn the display off after 3 minutes of Inactivity.

*The Chief Intellitape can be used either as a stand alone device or with Chief's Computerized Measuring software.*

## Operation

### *As a stand alone device:*

1. Press **ON/OFF** button to turn the unit on.
2. Pull cable to desired measurement length. The measurement will be displayed.
3. All measurements are to be taken from the tip of the front pointer to the tip of the rear pointer.
4. Press **ON/OFF** button to turn the unit off.

### *With the Genesis software:*


1. Setup Intellitape within Genesis per setup instructions.
2. Press **ON/OFF** button to turn the unit on.
3. Start a measurement and select the appropriate vehicle.
4. Body openings mode can be entered in two ways.

- Click the **TRAM** Button on the opening screen




Enter Body  
Openings Mode

- If you are currently measuring with a scanner, click the Red **X** to stop the scanner mode. Click the **TRAM** icon in the bottom right corner of the screen.

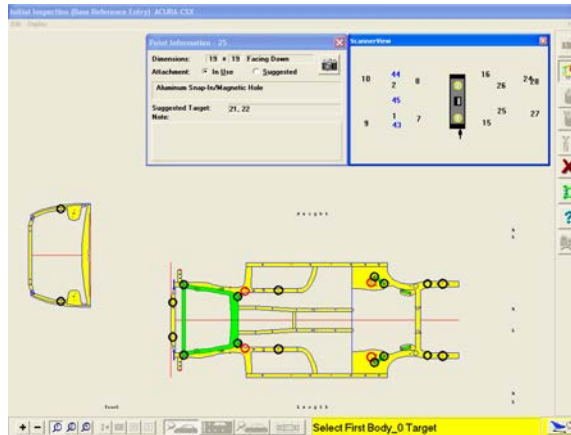


Exit Scanner Mode

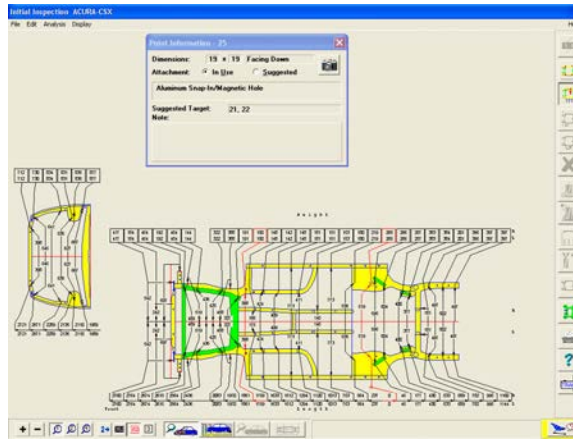

Enter Body  
Openings Mode


5. Click the **TRAM** button on the right side of the screen.

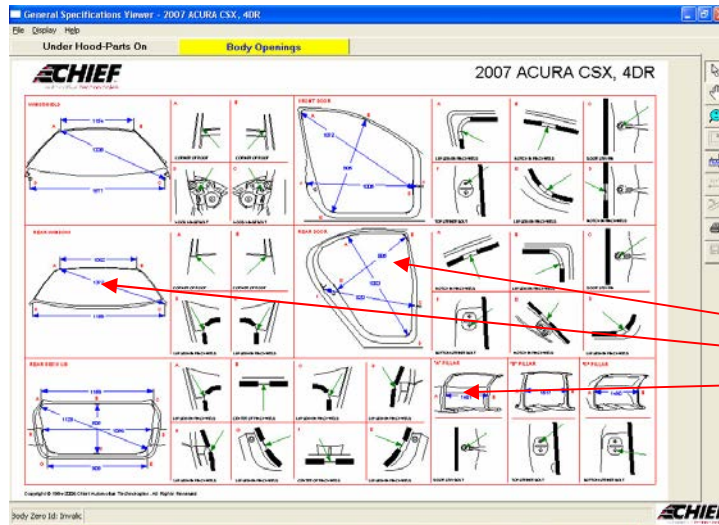

Tram Button

Measurement  
Reference  
Lines

6. Select the locations on the vehicle that you wish to measure by clicking on the Measurement Reference Line between the two points.
7. Click the top button with the car icon on the measurement dialog box to enter Initial measurement mode.

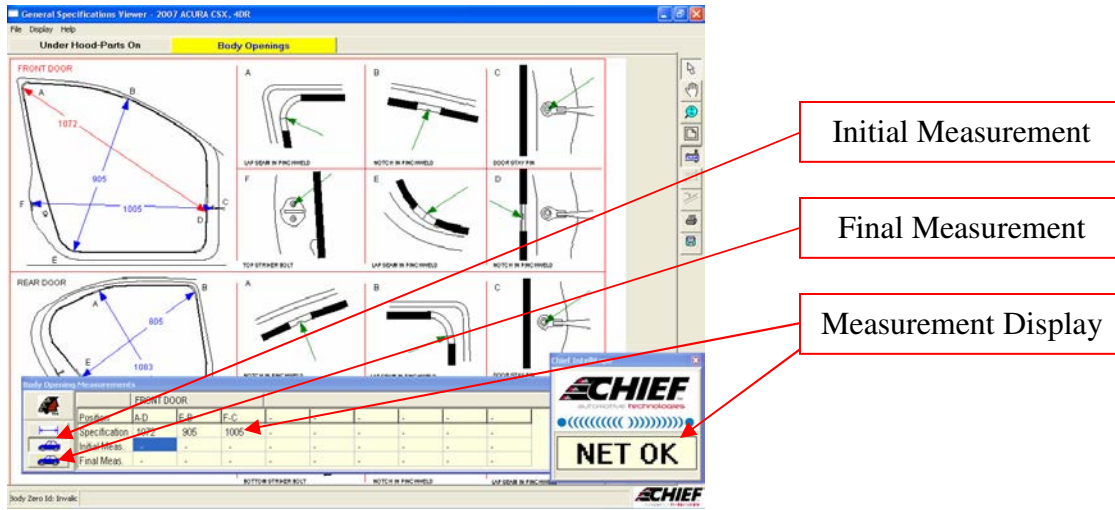

8. Pull cable to desired measurement length. The measurement will be displayed.
9. All measurements are to be taken from the tip of the front pointer to the tip of the rear pointer.
10. Press the **SEND** button on the Intellitape to transmit the measurement to Genesis.
11. Repeat for each selected measurement.
12. Press **ON/OFF** button to turn the unit off.

## For comparison measurement:

1. Press **ON/OFF** button to turn the unit on.
2. Pull cable to desired measurement length. . The measurement will be displayed.
3. All measurements are to be taken from the tip of the front pointer to the tip of the rear pointer.
4. Press the **ZERO** button.
5. The Intellitape will now be set to zero at that length.
6. Pull cable to measurement length to be compared. The difference between the two measurements will be displayed.
7. Press **ON/OFF** button to turn the unit off. This will also take the Intellitape out of comparison mode.



**INTELLITAPE  
USERS MANUAL**



**P.O. Box 1368  
Grand Island, Nebraska 68802-1368  
Phone: 308-384-9747  
Fax: 308-384-8966**

**[www.chiefautomotive.com](http://www.chiefautomotive.com)**

**Chief reserves the right to alter product specifications and/or package components without notice.**